


▼▼▼▼▼ BULMAN PRODUCTS, INC.

1650 MCREYNOLDS NW. GRAND RAPIDS, MICHIGAN 49504
 PHONE (616) 363-4416 FAX (616) 363-0380
 www.bulmanproducts.com

CUTTER ARM ASSEMBLY REPLACEMENT INSTRUCTIONS MODELS R993, R994, R995, R996, R997, R998, R999 (MODELS B-1, B-2, B-4, B-8)

1. USE A PIN PUNCH, NAIL OR SMALL TOOL TO DRIVE RIVET PIN INTO HOLLOW TUBE. REPEAT ON OTHER DRIVE RIVETS IF NECESSARY.
2. AFTER DRIVE RIVETS ARE PUNCHED THROUGH, REMOVE AND REPOSITION BOTTOM CUTTER ARM ASSEMBLY CORRECTLY.
3. INSTALL NEW DRIVE RIVETS BY STRIKING WITH A HAMMER UNTIL PIN IS FLUSH WITH THE TOP OF THE RIVET.

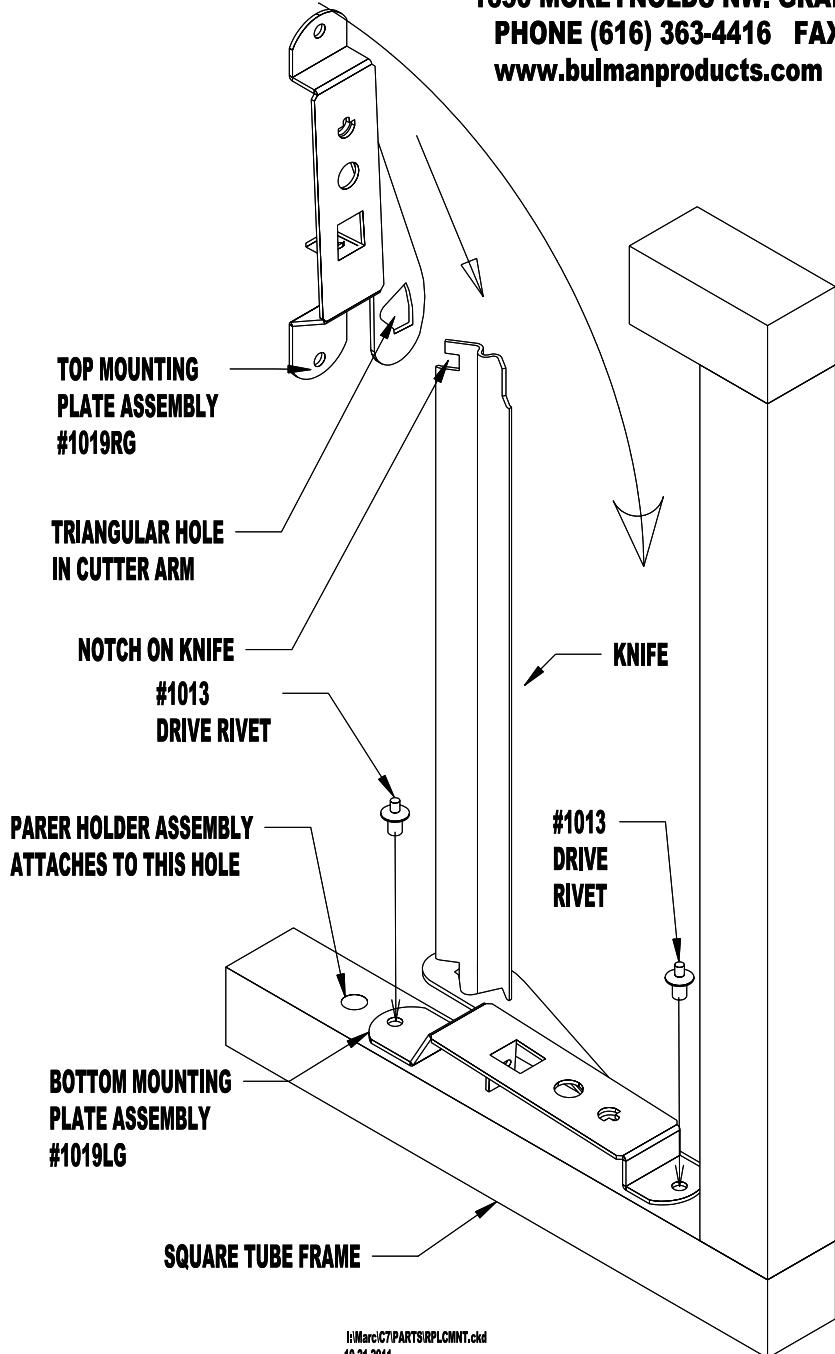

UNIT	REG	SERRATED
SIZE	KNIFE	KNIFE
20	26120P	992020
27	26127P	992727
36	26138P	993636
48	26150P	994848

CASTER PACK PART NO. 397

